 


RED STAR ARMS Inc.

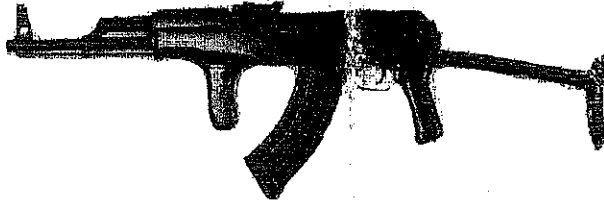

AK TRIGGER SYSTEM

 
Made in the USA.

Will fit most milled and stamped 7.62, 5.45, and .223 AK variants.

This 100% milled trigger group is adjustable for Pretravel, Overtravel, disconnecter engagement, and Trigger Pull. Depending on your preference and application, it can be adjusted for Single Stage or Two Stage pulls.


Package includes heat treated and blued hammer, trigger, and disconnecter, along with a US made Wolff disconnecter spring, a cheater pin which holds the trigger and disconnecter together while installing the parts in your rifle, and allen wrench for adjustment, and detailed instructions for installing and adjusting your trigger group.

Sar1, Sar2, Sar3
Price: \$84.99
Shipping: \$5.00
Item#: 009
Patent Pending

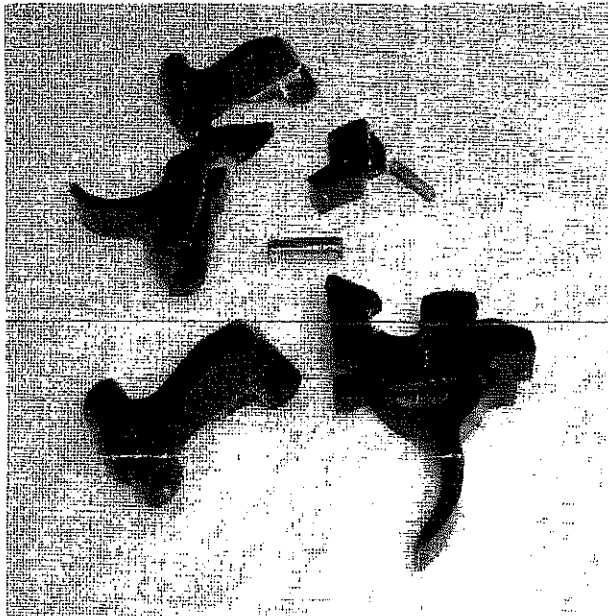

Grand Masters LLC, DBA

 
Power Custom

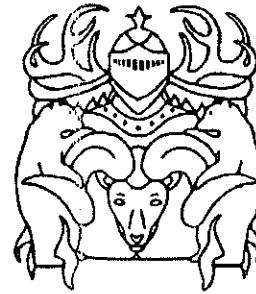

AK-47 EXTENDED MAG RELEASE

A natural evolution of the AK-47 magazine release. Dramatically decreases magazine change times by allowing a quick mag drop with the trigger finger while keeping the strong hand on the pistol grip.

 
Price: \$19.99
Shipping: \$5.00
Item#: 004

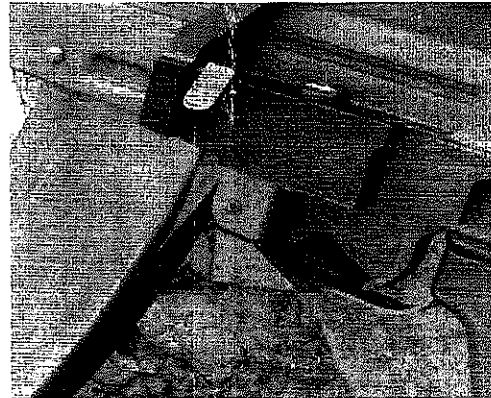

AK-47 REAR PEEP SIGHT

Specifically designed for the AK-47 the MOJO aperture sight is fully screw-adjustable for elevation and windage. Note the integrally machined mounting lugs for maximum strength.

 
Price: \$39.99
Shipping: \$5.00
Item#: 006

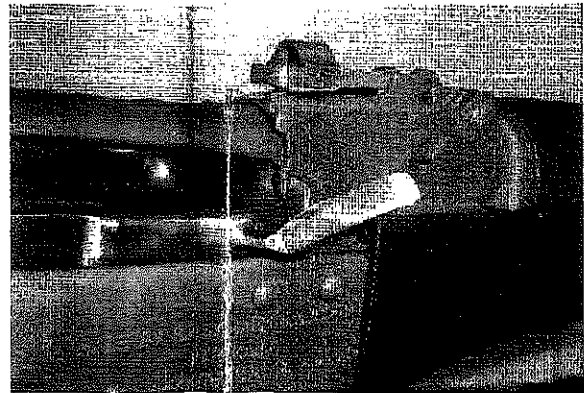

PIN RETAINER PLATE INSTALLATION



 Start with the selector, carrier, bolt, and recoil spring assembly removed from your rifle. Pull the retainer wire (Shepherd's Crook) from the grooves of the trigger and hammer pins, and remove it from your rifle.

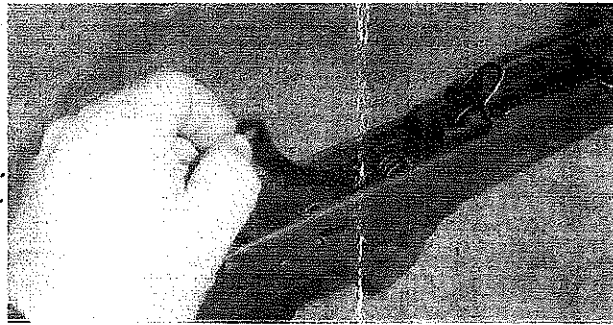


Place the retainer plate such that the open end (Area A) is forward, and slide it along the opposite side of the receiver from where the selector would be positioned. The closed circle and tail of the plate (Area C) will be positioned toward the rear of the rifle, as the selector yoke will ultimately be routed through the closed circle in the retainer plate.


RED STAR ARMS Inc.



 Grand Masters LLC, DBA
Power Custom

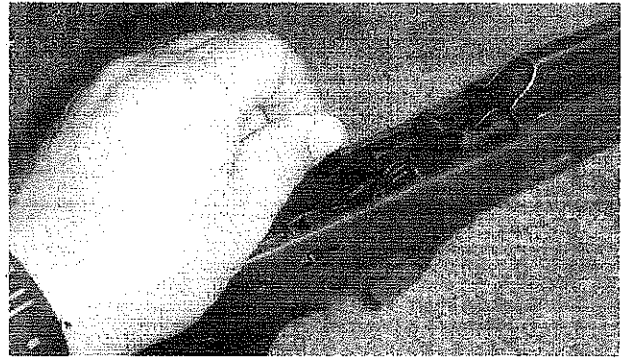

 When routing the plate forward, ensure that the open end of the plate is secured in the groove of the hammer pin, between the receiver wall and the hammer spring. It may be necessary to "push" the coils of the hammer spring out of the way in order to seat the hammer pin. Push the plate forward until Area A is securely around the hammer pin and positioned in the groove of the pin.

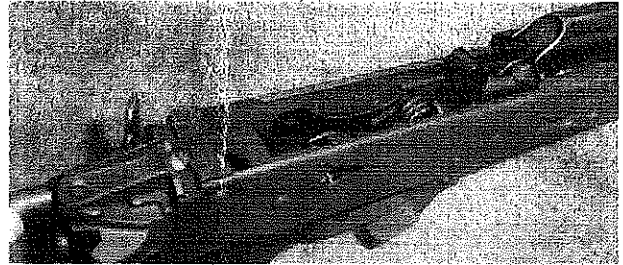

Once the plate is securely forward, rotate it downward so that the notch at Area B drops around the groove in the trigger pin. Ensure that the plate is routed into the groove in the trigger pin as was done previously on the hammer pin. At this point, if the plate is installed correctly, Areas A & B should be set in the grooves of the hammer and trigger pins, and the hole in the closed end of the plate at Area C should be in line with the hole through which the yoke of the selector is routed in normal installation.

You may now install your selector by routing the yoke through the retainer plate and into its hole in the receiver wall.

Wasn't that easy?

