


SERIES II ADAPTER
RUGER MINI/14 SERIES & MINI-THIRTY

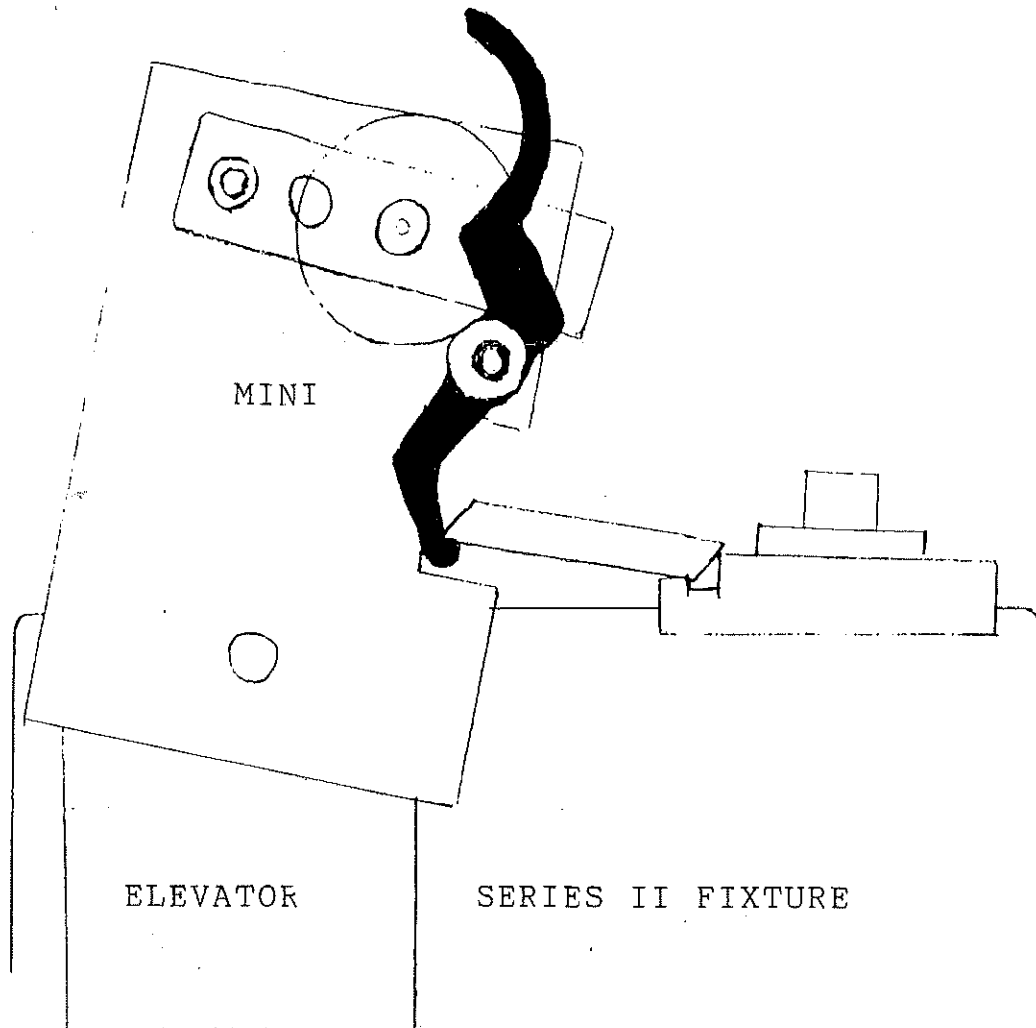

NOTE, REMOVE DISCONNECTOR FROM TRIGGER AND USE BUSHING IN TRIGGER. PLACE TRIGGER & BUSHING OVER PIN AND MAKE SURE THE STEP ON THE SIDE OF THE SEAR IS AGAINST STOP AREA ON ADAPTER. PLACE CLAMP OVER 1/4 INCH THREADED BOLT AND PUT CLAMP ON & TIGHTEN SNUG. SEE BASIC INSTRUCTION WITH SERIES II STONING FIXTURE. SET UP ADAPTER ON ELEVATOR AS SHOWN ABOVE. ADJUST TO INDEX MARK ON REAR OF ADAPTER (MARKED "S") TO CENTER OF LINE ON ELEVATOR. THIS WILL GIVE THE APROX. LOCATION FOR STARTING. IT IS BEST TO USE THE DYKEM LAYOUT FLUID OR MARKING FLUID ON SEAR SURFACE TO THE FINE ADJUSTMENT FOR A REFERENCE STARTING POINT. WHEN THIS POINT IS ESTABLISHED, TIGHTEN RETAINER SCREW.

NOTE---TO LIGHTEN PULL, RAISE ELEVATOR. TO MAKE PULL HEAVIER, LOWER ELEVATOR. TO PREVENT PROBLEMS AND ACCIDENTS, IT SHOULD BE ADVISED THAT THIS TYPE OF FIREARM SHOULD HAVE A TRIGGER PULL NO LIGHTER THEN 4 1/2 LB. BESURE ALL SAFETIES WORK AND YOU DO NOT HAVE HAMMER FOLLOW.

