



COMPATIBLE WITH XD .9MM .40 .45 MODELS
(NOT COMPATIBLE WITH XD-S, XD(M), MOD.2)

Installation Instructions

1. Put on eye protection, remove the magazine, and check that the firearm is unloaded before installation.
2. Remove slide from the frame of the gun, then separate the barrel from the recoil spring. Refer to the Springfield Operations and Safety Manual.
3. Remove the striker locking plate. Do this by depressing the striker spring guide with a punch. While the striker spring guide is depressed slide the striker locking plate out with your thumb (Pic 1). Warning: The striker spring guide is spring-loaded and will spring out if you're not careful.
4. Install the provided striker locking plate by depressing the striker spring guide with a punch and sliding the striker locking plate into the slide at the same time. Then attach the slide to the gun. Refer to the Springfield Operations and Safety Manual.
5. Attach the clip to the striker locking plate with the provided screws and allen key (Pic 2). Before use, check to make sure that all functions of the firearm work and that you can handle the firearm safely.